SERIAL NO. 3266

ONKYO. SERVICE MANUAL

COMPACT DISC PLAYER MODEL DX-6430



Black and Silver models

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK A ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEA-SUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

Optical non-contact Signal readout system: Reading rotation:

About 500~200 r.p.m.

(constant linear velocity)

Linear velocity: 1.2~1.4m/s

Cross interleave readsolomon code Error correction system:

16 bits linear Decoded bits:

88.2kHz (two-times oversampling) Sampling frequency:

Number of channels: 2 (Stereo) Frequency response: 5Hz~20kHz Total harmonic distortion: 0.03% (at 1kHz)

Dynamic range: 93dB Signal to noise ratio: 96dB

Channel separation: 87dB (at 1kHz)

Wow and Flutter: Below threshold of measurability

Power comsumption: 13 watts Output level: 2 volts r.m.s. Dimensions (W x H x D): $435 \times 88 \times 357$ mm

17-1/8" x 3-7/16" x 14-1/16"

Weight: 4.8kg, 10.6 lbs.

Specifications are subject to change without notice.



TABLE OF CONTENTS

Specifications	
Service procedures	2
Note on compact disc	3
Protection of eyes from laser beam	4
Laser warning label	4
Caution on replacement of pick-up	
Packing view	7
Exploded view	8
Parts list	9
Mechanism exploded view	10
Parts list	11
Disassembling procedures	12
Circuit descriptions	14
Trouble shooting guide	19
	21
Adjustment procedures	25
PC DOME VIEW HOLL BOTTOM SIGE	26
Scrientatic diagram	31
Pc board-parts list	33
	35
	37

SERVICE PROCEDURES

1. Removing the Locking Plate

Locking plate is located on the bottom panel of this unit. Before using this unit for the first time, the plate must be removed. If power is switched on while this part is still in place, the unit will not operate properly

- 1. Locking plate
- 2. Tapping screw


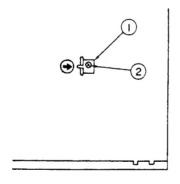


Fig. 1

- 2. Procedures for replacement of flat packaged ICs
 - 1. Tools to be used:
 - (1) Soldering iron Grounded soldering iron or soldering iron with leak resistance of 10 Mohms or more.

Form of soldering iron's tip:



- (2) Magnifying glass . . . for checking of finished works
- (3) Tweezers for handling of IC and forming of leads
- (4) Grounding ring Countermeasure for electrostatic breakdown
- (5) Nipper for removing defective IC
- (6) Small brush for application of flux
- 2. Work Procedures:
- (1) Remove the defective IC

Cut all leads of the defective IC one by one using a nipper and remove the IC.

- (2) Clean the pattern surface of the PC board. Get rid of the remaining leads and solder.
- (3) Check and from the leads of the new flat pack-

aged IC to be installed.

From every lead on the new IC using a pair of tweezers, so that all of them are aligned neatly without being risen, twisted or inclined toward one side. Especially the rising portion of every lead must be formed with greatest care.




Fig. 3

(4) Apply flux to the PC board.

Apply flux to the pattern surface of the PC board which has been cleaned, as shown in the illustration. The area to be applied with flux is the portion of about 2.5mm in width where the IC's leads are to be soldered.

Be careful to apply minimum amount of flux required so as not to smear it on unwanted areas.

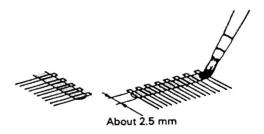


Fig. 4

(5) Temporarily tighten the IC

Carefully align the pattern and IC's leads, so that the IC will be temporarily tightened to the pattern on the four leads at the corners. At this time, soldering is required, but no need to apply soldering material.


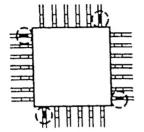


Fig. 5


(6) Apply flux to IC's leads

Apply flux to the areas of IC's leads where soldering is to be performed. Be careful not to smear flux on the root portion of any lead or the body of IC.



(7) Soldering

While attaching the tip of the soldering iron to the soldering point as shown in the illustration, feed 2—5mm of soldering wire. Then, slowly move the iron in the direction indicated by the arrow in the illustration, so that the leads will be soldered to the pattern. Move the iron in the rate of approximately 1cm in 5sec. Proceed with your work while confirming a clean fillet of solder is formed on each lead, subsequent to the melting of flux.

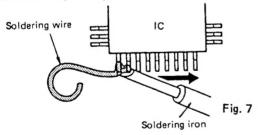

CAUTION

- If you move the iron too quickly, loose soldering is likely to result.
- Be especially careful when soldering the first lead where loose soldering is most liable to be formed.

(8) Check the results

When soldering of all leads is finished, check the soldered portion on every lead with a magnifying glass. A tester must not be used or checking of any soldered position

NOTE ON COMPACT DISC

Holding Compact Discs

Hold Compact Discs by the edges so that you do not touch


the surface of disc. Remember that the side of the disc with the "rainbow" reflection is the side containing the audio information.

Do not attach tape or paper to the label side of the disc and always be careful not to leave fingerprints on the side that is played.

Storing Compact Discs

Store Compact Discs in a location protected from direct sunlight, high heat and humidity and extremely high and low temperatures. Discs should never be left in the trunk or interior of an automobile in the sun since the temperature can become very high in such a closed environment.


Always store Compact Discs in the holders in which they were sold. Never leave a disc in the player's disc holder for

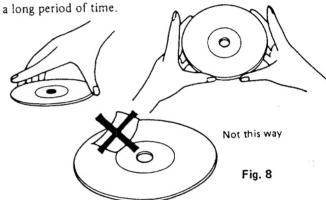

• Cleaning Compact Discs

Before playing a disc wipe off the playing surface with a soft cloth to remove dust and other soil. Wipe the surface in straight lines from the center of the disc outward, not in a circular motion as you would with a phonograph record.

Do not use benzene, chemical cleansers or phonograph record cleaning solutions to clean Compact Discs. Also avoid static electricity prevention solutions since they can damage the surface of Compact Discs.

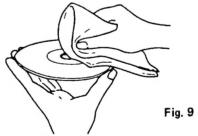

Problems Caused by Dew

Dew can form inside a Compact player when it is brought from a cold environment into a warm room, when a room is rapidly heated and if a player is left in a humid environ-

This dew can prevent the laser pickup from reading the data contained in the pits in the disc surface. If the player does not operate properly because of dew, remove the disc and leave the player's power switch on for about one hour to remove all moisture.

(5) Temporarily tighten the IC

Carefully align the pattern and IC's leads, so that the IC will be temporarily tightened to the pattern on the four leads at the corners. At this time, soldering is required, but no need to apply soldering material.


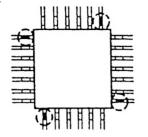


Fig. 5


(6) Apply flux to IC's leads

Apply flux to the areas of IC's leads where soldering is to be performed. Be careful not to smear flux on the root portion of any lead or the body of IC.



(7) Soldering

While attaching the tip of the soldering iron to the soldering point as shown in the illustration, feed 2 –5mm of soldering wire. Then, slowly move the iron in the direction indicated by the arrow in the illustration, so that the leads will be soldered to the pattern. Move the iron in the rate of approximately 1cm in 5sec. Proceed with your work while confirming a clean fillet of solder is formed on each lead, subsequent to the melting of flux.

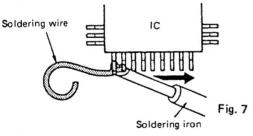

CAUTION

- If you move the iron too quickly, loose soldering is likely to result.
- 2) Be especially careful when soldering the first lead where loose soldering is most liable to be formed.

(8) Check the results

When soldering of all leads is finished, check the soldered portion on every lead with a magnifying glass. A tester must not be used or checking of any soldered position

NOTE ON COMPACT DISC

• Holding Compact Discs

Hold Compact Discs by the edges so that you do not touch


the surface of disc. Remember that the side of the disc with the "rainbow" reflection is the side containing the audio information.

Do not attach tape or paper to the label side of the disc and always be careful not to leave fingerprints on the side that is played.

• Storing Compact Discs

Store Compact Discs in a location protected from direct sunlight, high heat and humidity and extremely high and low temperatures. Discs should never be left in the trunk or interior of an automobile in the sun since the temperature can become very high in such a closed environment.

Always store Compact Discs in the holders in which they were sold. Never leave a disc in the player's disc holder for

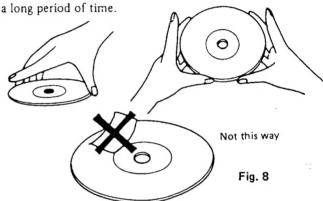

• Cleaning Compact Discs

Before playing a disc wipe off the playing surface with a soft cloth to remove dust and other soil. Wipe the surface in straight lines from the center of the disc outward, not in a circular motion as you would with a phonograph record.

Do not use benzene, chemical cleansers or phonograph record cleaning solutions to clean Compact Discs. Also avoid static electricity prevention solutions since they can damage the surface of Compact Discs.



Problems Caused by Dew

Dew can form inside a Compact player when it is brought from a cold environment into a warm room, when a room is rapidly heated and if a player is left in a humid environment.

This dew can prevent the laser pickup from reading the data contained in the pits in the disc surface. If the player does not operate properly because of dew, remove the disc and leave the player's power switch on for about one hour to remove all moisture.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMMISION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

Laser Diode Properties

Material: GaAS/GaAlAs

• Wavelength: 780nm

• Emission Duration: continuous


• Laser output: max. 0.5mW*

*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

LASER WARNING LABEL

The label shown below are affixed.

1. Warning label

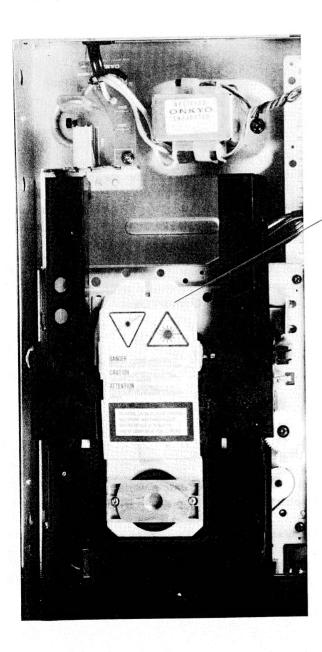





DANGER — INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

CAUTION —HAZARDOUS LASER AND ELECTROMAGNETIC RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

ATTENTION — RAYONNEMENT LASER
ET ELECTROMAGNETIQUE DANGEREUX SI
OUVERT AVEC L'ECLENCHEMENT DE SECURITE
ANNULE. SN293 60911

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAF-BRYDER ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

Photo 1


2. Class 1 label

This label is located on the back panel.



Photo 2

ADVARSEL



Denne mærkning er anbragt på apparatets højre side og indikerer, at apparatet arbejder med laserstråler af klasse 1, hvilket betyder, at der anvendes laserstråler af svageste klasse, og at man ikke på apparatets yderside kan blive udsat for utilladelig kraftig stråling.

APPARATET BØR KUN ÅBNES AF FAGFOLK MED SÆRLIGT KENDSKAB TIL APPARATER MED LASERSTRÅLER!

Indvendigt i apparatet er anbragt den her gengivne advarselsmærkning, som advarer imod at foretage sådanne indgreb i apparatet, at man kan komme til at udsætte sig for laserstråling.



Fig. 10

VAROITUS! Laite sisältää laserdiodin, joka lähettää (näkymätöntä) silmille vaarallista lasersäteilyä.

CAUTION ON REPLACEMENT OF PICK-UP

The laser diode in the optical pick-up block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefulley take the following precautions. (The following precautions are included in the service parts).

PRECAUTIONS

1. Ground for the work-desk.

Place a conductive sheet such as a sheet of copper (with impedance lower than $10^6\,\Omega$) on the work-desk and place the set on the conductive sheet so that the chassis.

2. Grounding for the test equipment and tools.

Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.

Cautions when attaching the optical pickup


- Insert the pickup into the 8-pin socket in accordance with the red mark direction. If the pickup is inserted in reverse, the optical pickup will be damaged.
- Arranged the pickup leads in accordance with the below view.
- 3) Use ribbon wire ties to separated the leads.

3. Grounding for the human body.

Be sure to put on a wrist-strap for grounding whose other end is grounded.

Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

- 4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.
- 5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

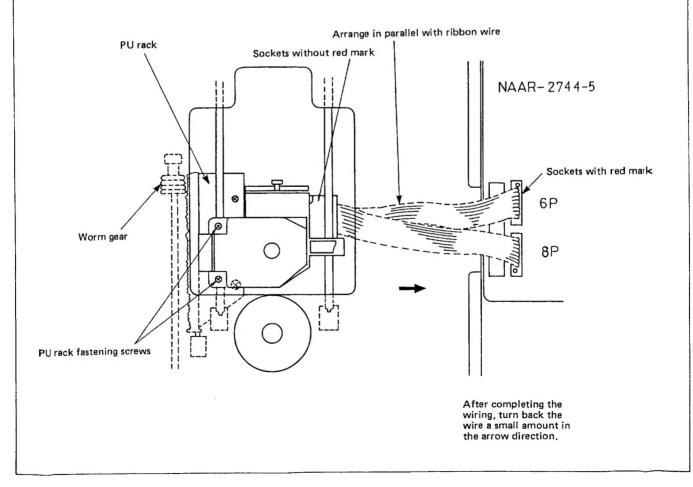

CAUTION ON REPLACEMENT OF PICK-UP

The laser diode in the optical pick-up block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefulley take the following precautions. (The following precautions are included in the service parts).

PRECAUTIONS

1. Ground for the work-desk.

Place a conductive sheet such as a sheet of copper (with impedance lower than $10^6\,\Omega$) on the work-desk and place the set on the conductive sheet so that the chassis.

2. Grounding for the test equipment and tools.

Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.

Cautions when attaching the optical pickup


- Insert the pickup into the 8-pin socket in accordance with the red mark direction. If the pickup is inserted in reverse, the optical pickup will be damaged.
- Arranged the pickup leads in accordance with the below view.
- Use ribbon wire ties to separated the leads.

3. Grounding for the human body.


Be sure to put on a wrist-strap for grounding whose other end is grounded.

Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

- 4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.
- 5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

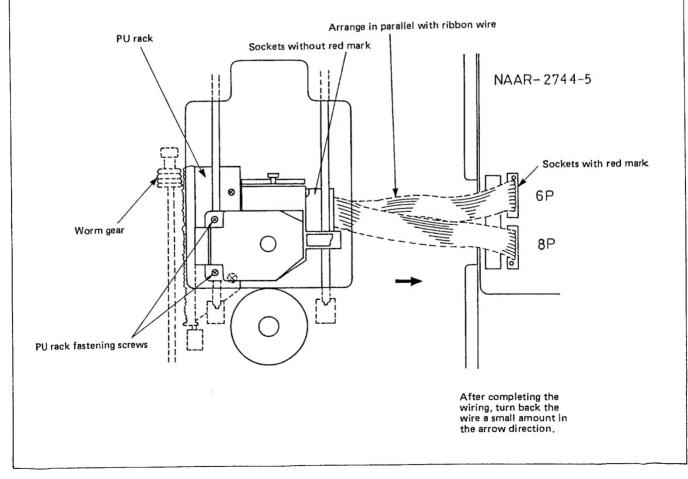


PACKING VIEW

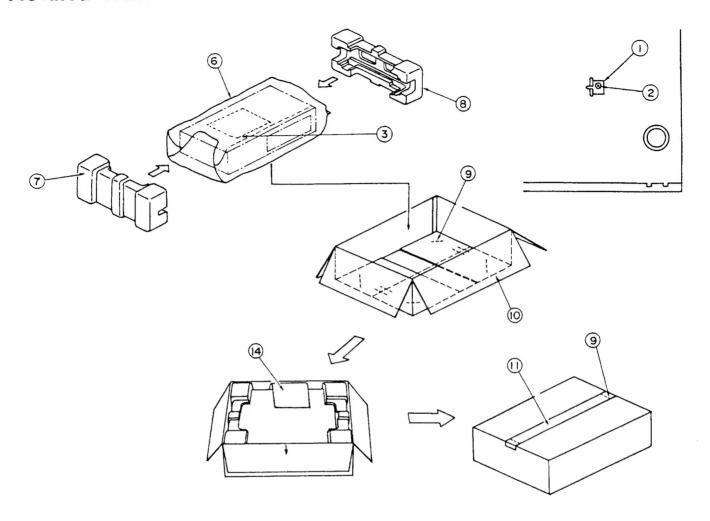

REF.NO.	PART NO.	DESCRIPTION
1	27141102	Locking plate
2	834430068	3TTS+6B(BC), Tapping screw
3	29360873	Label, locking plate
6	29100036A	550×850mm, poly-vinyl bag
7	29091110A	Pad L
8	29091111A	Pad R
9	282301	Sealing hook
10	29051505	Master carton box <black model=""></black>
	29051506	Master carton box <silver model=""></silver>
11	260012	Damplon tape
14	Accessary bag ass	s'y
	2010098	Connection cord
	241072	RC-103C, Remote control unit
	3010054	UM-3, Two batteries
	29341138	Instruction manual
	29100097	350×250mm, Poly-vinyl bag
	29365020	Warranty card

EXPLODED VIEW

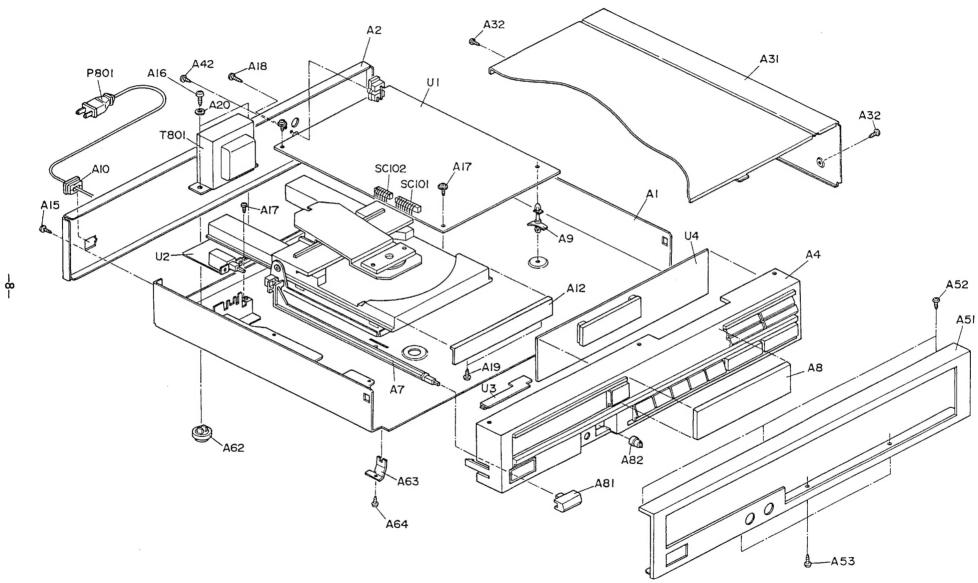

PARTS LIST


	REF. NO.	PART NO.	DESCRIPTION
	A 1	27100117A	Chassis
	A2	27120972	Back panel
	A4	27110350A	Front bracket ass'y <s></s>
		27110351A	Front bracket ass'y
	A7	27273065	Joint
	A8	28191398	Clear plate
	A9	27190011	Holder
	A10	27300750	Strainrelief
	A12	27210783	Panel, Door <s></s>
		27210785	Panel, Door
	A15	834430068	3TTS+6B(BC) Tapping screw
	A16	830440089	4TTC+8C(BC), Tapping screw
	A17	831130088	3TTW+8B, Tapping screw
	A18	834430108	3TTS+10B(BC), Tapping screw
	A19	833430080	3TTP+8P(BC), Tapping screw
	A20	870065	Special washer
	A21	834230108	3TTS+10B(Ni), Nickel screw
	A22	28175138	Insulated plate
	A31	28184348	Top cover <s></s>
		28184349	Top cover $\langle B \rangle$
	A51	27210834	Front panel <s></s>
φ		27210836	Front panel
1	A52	833430080	3TTP+8P(BC), Tapping screw
	A53	834430068	3TTS+6B(BC), Tapping screw
	A62	27175130	Leg
	A63	27141102	Locking plate
	A64	834430068	3TTS+6B(BC), Tapping screw
	A81	28322878	Knob, power <s></s>
		28322879	Knob, power $\langle B \rangle$
	A82	28322772	Knob, level <s></s>
		28322437	Knob, level
	P801	253127 or	AS-CEE, Power supply cord
		253129	
	SC101	2000666	NSAS-16P-622, Socket
	SC102	2000667	NSAS-12P-623, Socket
	T801	2300181	NPT-950G, Power transformer
	U1	1H011544-5A	NAAR-2744-5a, Main circuit
			pc board ass'y

REF. NO.	PART NO.	DESCRIPTION
U2	1H008550-2	NAPS-2750-2, Power supply circuit pc board ass'y
U3	1H012568-1	NAAF-2968-1, Headphone terminal pc board ass'y
U4	1H012511-2	NADIS-2911-2, Display circuit pc board ass'y
	29360911	Label LASER
	29360687	Label CLASS 1

NOTE: <S>: Only Silver model : Only Black model

NOTE: THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

MECHANISM EXPLODED VIEW

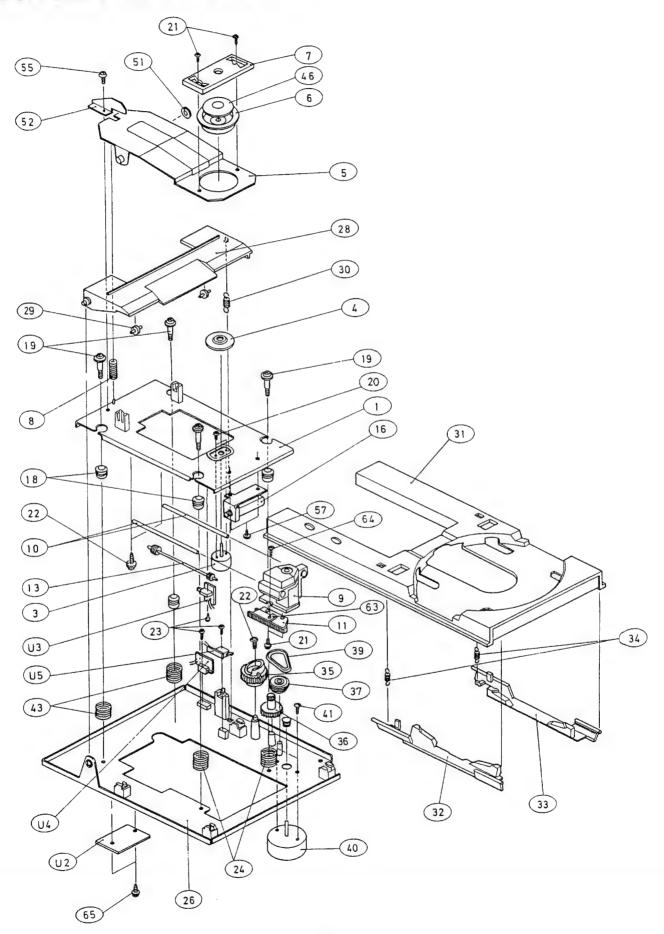


PARTS LIST

1 27100098F Chassis 3 24502203 Spindle motor 4 27300889A Turntable platter 5 27300847B Am P 6 27300848A Cap CH 7 27300849B Holder, cap 8 27180327 Spring 9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27300855E Arm L 27300856 Cam gear 27180310C Disc tray 22 27300901 Disc lifter L 33 27300856 Cam gear 36 27300857B Flat wheel 37 27300857B Flat wheel 37 27300858 Pulley gear 38 27300858 Pulley gear 39 27300850 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 42 7180320 Spring 43 33430080 3TTP+8P(BC), Tapping screw 44 27180320 Spring 55 83443068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 834430068 3TTS+6B(BC), Tapping screw 58 834430068 3TTS+6B(BC), Tapping screw 59 834430068 3TTS+6B(BC), Tapping screw 51 27270203 Spacer 51 27270203 Spacer 51 27270204 Spacer 52 2714105A Bracket, holder 53 834430068 3TTP+8P(BC), Tapping screw 58 834430068 3TTP+8P(BC), Tapping screw 59 834430068 3TTP+8P(BC), Tapping screw 50 834430068 3TTP+8P(BC), Tapping screw 51 834430068 3TTP+8P(BC), Tapping screw 52 834430068 3TTP+8P(BC), Tapping screw 53 834426068 2.6TTS+6B(BC), Tapping screw 54 83430080 3TTP+8P(BC), Tapping screw 55 834430080 3TTP+8P(BC), Tapping screw 56 833430080 3TTP+8P(BC), Tapping screw 57 834426064 2.6F+6F, Pan head screw 58 834430080 3TTP+8P(BC), Tapping screw 58 834430080 3TTP+8P(BC), Tapping screw 59 834430080 3TTP+8P(BC), Tapping screw 59 834426064 2.6F+6F, Pan head screw 59 834430080 3TTP+8P(BC), Tapping screw 59 834430080 3TTP+8P(BC), Tapping screw 59 834426064 2.6F+6F, Pan head screw	REF.NO.	PART NO.	DESCRIPTION
3 24502203 Spindle motor 4 27300889 A Turntable platter 5 27300847B Arm P 6 27300848A Cap CH 7 27300849B Holder, cap 8 27180327 Spring 9 241073 A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300856 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27120206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 53 834430068 3TTS+6B(BC), Tapping screw 54 831430080 3TTP+8P(BC), Tapping screw 55 834430068 3TTS+6B(BC), Tapping screw 66 833430080 3TTP+8P(BC), Tapping screw 67 834426668 2.6TTS+6B(BC), Tapping screw 68 833430080 3TTP+8P(BC), Tapping screw 69 834426668 3TTS+6B(BC), Tapping screw 60 833430080 3TTP+8P(BC), Tapping screw 61 10498545-1 NASW-2845-1, Start switch pc board ass'y 61 10498546-1 NASW-2845-1, Open switch pc board ass'y 71 10498546-1 NASW-2845-1, Close switch pc board ass'y 71 10498546-1 NASW-2846-1, Open switch pc board ass'y 71 10498546-1 NASW-2846-1, Open switch pc board ass'y 71 10498546-1 NASW-2846-1, Open switch pc board ass'y	1	27100098F	Chassis
4 27300849A Turntable platter 5 27300847B Arm P 6 27300849B Holder, cap 8 27180327 Spring 9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 25 27180319 Spring 26 27100099G Chassis L 27180310B Spring 31 27300851E Arm L 27300900 Disc lifter L 33 27300856B Ca			
5 27300847B Arm P 6 27300848A Cap CH 7 27300849B Holder, cap 8 27180327 Spring 9 241073A MLP-8, Optical pick-up 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27 300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300901 Disc lifter L 33 27300901 Disc lifter L 33 27300851B Cam gear 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300860 Belt 40 10498901 Motor ars'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270203 Spacer 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 65 833430080 3TTP+8P(BC), Tapping screw 67 834426068 2.6TTS+6B(BC), Tapping screw 68 2714105A Bracket 69 82112606 2.6P+6F, Pan head screw 60 833430080 3TTP+8P(BC), Tapping screw 61 2741105A Bracket 62 82112606 2.6P+6F, Pan head screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 82112606 2.6P+6F, Pan head screw 67 834426168 2.6FTS+6B(BC), Tapping screw 68 82112606 2.6P+6F, Pan head screw 714105A Bracket 714105A			
6 27300848A Cap CH 7 27300849B Holder, cap 8 27180327 Spring 9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300801C Disc lifter L 33 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300856B Cam gear 37 27300858 Pulley gear 38 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270206 Spacer 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 53 834430068 3TTS+6B(BC), Tapping screw 54 82112606 2.6P+6F, Pan head screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 834430068 3TTS+6B(BC), Tapping screw 58 834430080 3TTP+8P(BC), Tapping screw 59 834426068 2.6TTS+6B(BC), Tapping screw 50 834426068 2.6TTS+6B(BC), Tapping screw 51 27270203 Pracket 52 2714105A Bracket 53 83430080 3TTP+8P(BC), Tapping screw 54 82112606 2.6P+6F, Pan head screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 833430080 3TTP+8P(BC), Tapping screw 59 834426068 2.6TTS+6B(BC), Tapping screw 50 834426068 2.6TTS+6B(BC), Tapping screw 51 83442606 2.6P+6F, Pan head screw 52 83442606 2.6P+6F, Pan head screw 53 83442606 2.6P+6F, Pan head screw 54 82112606 2.6P+6F, Pan head screw 57 83442606 2.6P+6F, Pan head screw 58 83442606 2.6P+6F, Pan head screw 59 83442606 2.6P+6F, Pan head screw 60 833430080 3TTP+8P(BC), Tapping screw 61 82112606 2.6P+6F, Pan head screw 62 82112606 2.6P+6F, Pan head screw 63 82142604 2.6P+6F, Pan head screw			
7 27300849B Holder, cap 8 27180327 Spring 9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27 300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300856B Cam gear 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300850 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 2770206 Spacer 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 53 834426068 2.6TTS+6B(BC), Tapping screw 46 27270206 Spacer 41 8212606 2.6P+6F, Pan head screw 48 2714105A Bracket 48 2112606 2.6P+6F, Pan head screw 49 2714105A Bracket 40 10498544-1 NASW-2845-1, Start switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 40 10498544-1 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board 48 33430080 3TTP+8P(BC), Tapping screw 49 NASW-2846-1, Open switch pc board			
8 27180327 Spring 9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27 3300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300857B Flat wheel 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 2770206 Spacer 46 27270206 Spacer 51 27270203 Dis Spring 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 66 2714105A Bracket 67 82112606 2.6P+6F, Pan head screw 68 833430080 3TTP+8P(BC), Tapping screw 69 27141105A Bracket 60 2.6P+6F, Pan head screw 61 2714105A Bracket 62 82112606 2.6P+6F, Pan head screw 63 2714105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 82112606 2.6P+6F, Pan head screw 67 NASW-2845-1, Start switch pc board 68 33430080 3TTP+8P(BC), Tapping screw 70 10498545-1 NASW-2845-1, Open switch pc board 70 10498546-1 NASW-2845-1, Close switch pc board 70 10498547-1 NASW-2847-1, Close switch pc board			
9 241073A MLP-8, Optical pick-up 10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300856 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270206 Spacer 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6TTS+6B(BC), Tapping screw 65 2.6TTS+6B(BC), Tapping screw 67 2741105A Bracket 68 833430080 3TTP+8P(BC), Tapping screw 69 2.6TTS+6B(BC), Tapping screw 70 10498544-1 NASW-2845-1, Start switch pc board ass'y 71 10498546-1 NASW-2845-1, Open switch pc board ass'y 71 NASW-2845-1, Close switch pc board ass'y 71 NASW-2847-1, Close switch pc board ass'y	8		
10 27260222 Shaft 11 27300850B Rack PU 13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 29 27185019A Roller 30 27180310B Spring 31 27300855E Arm L 29 27185019A Roller 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300856B Cam gear 37 27300858 Pulley gear 39 27300858 Pulley gear 39 27300858 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270203 Packet, holder 55 834430068 3TTS+6B(BC), Tapping screw 56 27141105A Bracket 67 834426068 2.6TTS+6B(BC), Tapping screw 68 27141105A Bracket 69 27141105A Bracket 60 82112606 2.6TTS+6B(BC), Tapping screw 61 10498544-1 NATM-2844-1, Terminal pc board ass'y 60 10498546-1 NASW-2845-1, Start switch pc board ass'y 61 10498546-1 NASW-2845-1, Close switch pc board ass'y 62 NASW-2845-1, Close switch pc board ass'y 63 NASW-2845-1, Close switch pc board ass'y 64 10498547-1 NASW-2847-1, Close switch pc board ass'y 65 NASW-2847-1, Close switch pc board ass'y 66 10498547-1 NASW-2847-1, Close switch pc board ass'y 67 NASW-2847-1, Close switch pc board ass'y 68 NASW-2847-1, Close switch pc board	9		
13 10498902 Shaft ass'y 16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27 3700855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 38 27300856 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270203 P10, Spacer 51 27270203 P10, Spacer 51 27270203 P10, Spacer 52 27141098 Bracket, holder 53 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 834430080 3TTP+8P(BC), Tapping screw 59 834426068 2.6TTS+6B(BC), Tapping screw 50 834430080 3TTP+8P(BC), Tapping screw 51 27270203 P10, Spacer 51 27270203 P10, Spacer 52 27141098 Bracket, holder 53 834430080 3TTS+6B(BC), Tapping screw 54 834430080 3TTS+6B(BC), Tapping screw 55 834430080 3TTP+8P(BC), Tapping screw 56 834430080 3TTP+8P(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 83430080 3TTP+8P(BC), Tapping screw 59 834426068 2.6TTS+6B(BC), Tapping screw 50 834430080 3TTP+8P(BC), Tapping screw 51 834426068 2.6TTS+6B(BC), Tapping screw 51 834426068 2.6TTS+6B(BC), Tapping screw 52 834430080 3TTP+8P(BC), Tapping screw 53 834430080 3TTP+8P(BC), Tapping screw 54 834430080 3TTP+8P(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 834430080 3TTP+8P(BC), Tapping screw 59 834426068 2.6TTS+6B(BC), Tapping screw 50 834430080 3TTP+8P(BC), Tapping screw 51 834426068 2.6TTS+6B(BC), Tapping screw 52 834430080 3TTP+8P(BC), Tapping screw 53 834430080 3TTP+8P(BC), Tapping screw 54 83443080 3TTP+8P(BC), Tapping screw	10		
16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300856 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 33430080 3TTP+8P(BC), Tapping screw 59 2714109A Bracket 40 2.6P+6F, Pan head screw 41 212606 2.6P+6F, Pan head screw 42 27180320 Spring 43 27180320 Spring 44 833430080 3TTS+6B(BC), Tapping screw 45 2714109A Bracket, holder 46 27270206 Spacer 51 27270203 Plos Spacer 51 27270203 Spring 52 2714109B Bracket, holder 53 834430068 3TTS+6B(BC), Tapping screw 54 82112606 2.6P+6F, Pan head screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 833430080 3TTP+8P(BC), Tapping screw 59 833430080 3TTP+8P(BC), Tapping screw 50 833430080 3TTP+8P(BC), Tapping screw 51 NASW-2845-1, Start switch pc board ass'y 51 NASW-2845-1, Open switch pc board ass'y 52 NASW-2845-1, Open switch pc board ass'y 53 NASW-2846-1, Open switch pc board ass'y 54 NASW-2847-1, Close switch pc board ass'y	11	27300850B	Rack PU
16 10498903 Motor ass'y 18 27300854A Cushion rubber 19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300856 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 33430080 3TTP+8P(BC), Tapping screw 59 2714109A Bracket 40 2.6P+6F, Pan head screw 41 212606 2.6P+6F, Pan head screw 42 27180320 Spring 43 27180320 Spring 44 833430080 3TTS+6B(BC), Tapping screw 45 2714109A Bracket, holder 46 27270206 Spacer 51 27270203 Plos Spacer 51 27270203 Spring 52 2714109B Bracket, holder 53 834430068 3TTS+6B(BC), Tapping screw 54 82112606 2.6P+6F, Pan head screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 833430080 3TTP+8P(BC), Tapping screw 59 833430080 3TTP+8P(BC), Tapping screw 50 833430080 3TTP+8P(BC), Tapping screw 51 NASW-2845-1, Start switch pc board ass'y 51 NASW-2845-1, Open switch pc board ass'y 52 NASW-2845-1, Open switch pc board ass'y 53 NASW-2846-1, Open switch pc board ass'y 54 NASW-2847-1, Close switch pc board ass'y	13		Shaft ass'y
19 801364 Special screw 20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300858 Pulley gear 39 27300850 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 83443068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 833430080 3TTP+8P(BC), Tapping screw 67 834426068 2.6TTS+6B(BC), Tapping screw 68 833430080 3TTP+8P(BC), Tapping screw 69 NASW-2845-1, Start switch pc board ass'y 60 NASW-2845-1, Start switch pc board ass'y 70 NASW-2845-1, Open switch pc board ass'y 71 NASW-2846-1, Open switch pc board ass'y 71 NASW-2847-1, Close switch pc board ass'y 71 NASW-2847-1, Close switch pc board ass'y 71 NASW-2847-1, Close switch pc board ass'y	16	10498903	
20 82142003 2P+3F(BC), Pan head screw 21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856 Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 58 34430060 3TTP+8P(BC), Tapping screw 58 34430060 3TTP+8P(BC), Tapping screw 59 27141105A Bracket 60 22.6TTS+6B(BC), Tapping screw 61 27141105A Bracket 62 2.6P+6F, Pan head screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 831430080 3TTP+8P(BC), Tapping screw 67 10498546-1 NASW-2845-1, Start switch pc board ass'y 68 Ud 10498546-1 NASW-2845-1, Open switch pc board ass'y 70 Ud 10498547-1 NASW-2847-1, Close switch pc board ass'y 71 Ud 10498547-1 NASW-2847-1, Close switch pc board ass'y	18	27300854A	Cushion rubber
21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 47 2770203 \$\text{Disc} \text{Disc} \text{Comparison} \text{Disc} \text{Comparison} \text{Disc} \text{Comparison} \text{Disc} Dis	19	801364	Special screw
21 82112605 2.6P+5F, Pan head screw 22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 47 2770203 \$\text{Disc} \text{Disc} \text{Comparison} \text{Disc} \text{Comparison} \text{Disc} \text{Comparison} \text{Disc} Dis	20	82142003	2P+3F(BC), Pan head screw
22 831430100 3TTW+10P(BC), Tapping screw 23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 67 10498545-1 NASW-2845-1, Start switch pc board 82 20 10498546-1 NASW-2846-1, Open switch pc board 82 37 NASW-2846-1, Open switch pc board 82 37 NASW-2846-1, Close switch pc board 83 37 NASW-2846-1, Open switch pc board 83 37 NASW-2846-1, Open switch pc board	21		2.6P+5F, Pan head screw
23 833420108 2TTP+10B(BC), Tapping screw 24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 45 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 82112606 2.6P+6F, Pan head screw 67 10498545-1 NATRM-2844-1, Terminal pc board 68 ass'y 10 10498546-1 NASW-2845-1, Start switch pc board 68 ass'y 10 10498546-1 NASW-2846-1, Open switch pc board 68 ass'y 10 10498547-1 NASW-2846-1, Open switch pc board	22	831430100	3TTW+10P(BC), Tapping screw
24 27180319 Spring 26 27100099G Chassis L 28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 68 27141105A Bracket 69 82112606 2.6P+6F, Pan head screw 60 3TTP+8P(BC), Tapping screw 61 10498546-1 NATRM-2844-1, Terminal pc board 61 NASW-2845-1, Start switch pc board 62 ass'y 63 NASW-2846-1, Open switch pc board 63 NASW-2846-1, Open switch pc board 63 NASW-2846-1, Open switch pc board	23		
28 27300855E Arm L 29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834426068 3TTS+6B(BC), Tapping screw 57 834426068 3TTS+6B(BC), Tapping screw 68 27141105A Bracket 69 82112606 2.6P+6F, Pan head screw 69 83430080 3TTP+8P(BC), Tapping screw 60 27141105A Bracket 61 82112606 2.6P+6F, Pan head screw 62 833430080 3TTP+8P(BC), Tapping screw 63 83430080 3TTP+8P(BC), Tapping screw 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 67 NATRM-2844-1, Terminal pc board ass'y 68 NASW-2845-1, Start switch pc board ass'y 69 NASW-2846-1, Open switch pc board ass'y 70 NASW-2846-1, Open switch pc board ass'y 71 NASW-2846-1, Open switch pc board ass'y 71 NASW-2847-1, Close switch pc board	24	27180319	Spring
29 27185019A Roller 30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 2730088 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 82112606 2.6P+6F, Pan head screw 67 NASW-2845-1, Start switch pc board ass'y 68 NASW-2845-1, Start switch pc board ass'y 70 NASW-2846-1, Open switch pc board ass'y 71 NASW-2846-1, Open switch pc board ass'y	26	27100099G	Chassis L
30 27180310B Spring 31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 83443068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 67 2141105A Bracket 68 82112606 2.6P+6F, Pan head screw 69 NASW-2845-1, Start switch pc board ass'y 104 10498545-1 NASW-2846-1, Open switch pc board ass'y 105 10498546-1 NASW-2846-1, Open switch pc board ass'y 106 10498547-1 NASW-2847-1, Close switch pc board	28	27300855E	Arm L
31 27300861C Disc tray 32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Ф10, Spacer 51 27270203 Ф10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 66 82112606 2.6P+6F, Pan head screw 67 10498546-1 NATRM-2844-1, Terminal pc board 68 ass'y 68 10498546-1 NASW-2846-1, Open switch pc board 69 10498546-1 NASW-2846-1, Open switch pc board 69 10498547-1 NASW-2846-1, Close switch pc board	29	27185019A	Roller
32 27300900 Disc lifter L 33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 51 27270203 Φ10, Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498545-1 NASW-2845-1, Start switch pc board ass'y NASW-2846-1, Open switch pc board U5 10498547-1 NASW-2846-1, Op	30	27180310B	Spring
33 27300901 Disc lifter R 34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 65 833430080 3TTP+8P(BC), Tapping screw 67 10498545-1 NATRM-2844-1, Terminal pc board ass'y 68 10498546-1 NASW-2845-1, Start switch pc board ass'y 68 10498546-1 NASW-2846-1, Open switch pc board ass'y 68 10498547-1 NASW-2846-1, Close switch pc board	31	27300861C	Disc tray
34 27180311C Spring 35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 65 833430080 3TTP+8P(BC), Tapping screw 67 27141105A Bracket 68 831430080 3TTP+8P(BC), Tapping screw 69 NATRM-2844-1, Terminal pc board ass'y 60 10498546-1 NASW-2845-1, Start switch pc board ass'y 60 10498546-1 NASW-2846-1, Open switch pc board ass'y 61 10498547-1 NASW-2847-1, Close switch pc board	32	27300900	Disc lifter L
35 27300856B Cam gear 36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw 65 833430080 3TTP+8P(BC), Tapping screw 65 NATRM-2844-1, Terminal pc board ass'y 65 NASW-2845-1, Start switch pc board ass'y 66 10498546-1 NASW-2846-1, Open switch pc board ass'y 67 NASW-2846-1, Open switch pc board ass'y 68 10498547-1 NASW-2847-1, Close switch pc board	33	27300901	Disc lifter R
36 27300857B Flat wheel 37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	34	27180311C	Spring
37 27300858 Pulley gear 39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	35	27300856B	Cam gear
39 27300860 Belt 40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	36	27300857B	Flat wheel
40 10498901 Motor ass'y 41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	37	27300858	Pulley gear
41 82142604 2.6P+4F(BC), Pan head screw 43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	39	27300860	Belt
43 27180320 Spring 44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 56 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	40	10498901	
44 833430080 3TTP+8P(BC), Tapping screw 46 27270206 Spacer 51 27270203 Ф10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	41	82142604	
46 27270206 Spacer 51 27270203 φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board		27180320	
51 27270203 Φ10, Spacer 52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	44	833430080	3TTP+8P(BC), Tapping screw
52 27141098 Bracket, holder 55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	46	27270206	
55 834430068 3TTS+6B(BC), Tapping screw 57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	51	27270203	
57 834426068 2.6TTS+6B(BC), Tapping screw 63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	52	27141098	
63 27141105A Bracket 64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	55	834430068	
64 82112606 2.6P+6F, Pan head screw 65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	57	834426068	
65 833430080 3TTP+8P(BC), Tapping screw U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board		27141105A	
U3 10498544-1 NATRM-2844-1, Terminal pc board ass'y U4 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board			
ass'y 10498545-1 NASW-2845-1, Start switch pc board ass'y U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board			
us ass'y 10498546-1 NASW-2846-1, Open switch pc board ass'y 10498547-1 NASW-2847-1, Close switch pc board	U3	10498544-1	
U5 10498546-1 NASW-2846-1, Open switch pc board ass'y U6 10498547-1 NASW-2847-1, Close switch pc board	U4	10498545-1	
U6 10498547-1 NASW-2847-1, Close switch pc board	U5	10498546-1	NASW-2846-1, Open switch pc board
	U6	10498547-1	NASW-2847-1, Close switch pc board

DISASSEMBLING PROCEDURES


1. Tray panel removal

- 1) Remove the tray with pressing the OPEN/CLOSE button.
- 2) Turn the unit over and put it on the soft cloth.
- 3) Remove the two screws from the tray.

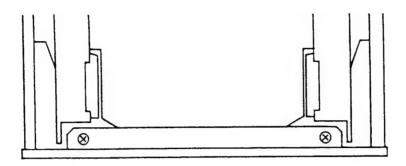


2. Tray removal

- 1) Remove the top cover.
- 2) Open the tray with pressing the OPEN/CLOSE button.
- 3) Release the hook of tray from stopper and pull the tray out.

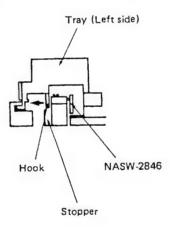


3. Mechanical chassis removal

- 1) Remove the top cover and tray.
- 2) Remove the three screws A from the mechanical chassis.
- 3) Remove the two connectors (P101 & P102) from the main pc board.
- 4) Pull the mechanical chassis out carefully.
- 5) Remove the two connectors (P201 & P202) from the terminal pc board.

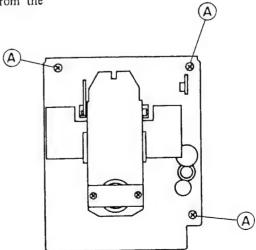


4. Arm P removal

- 1) Remove the top cover.
- 2) Remove a screw B from the bracket, holder.
- 3) Remove the arm P from the stopper.

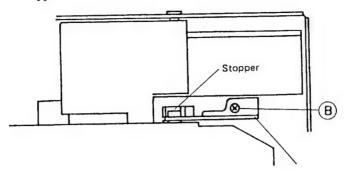



5. Replacing the spindle motor and turntable platter

- 1) Remove the tray and arm P.
- 2) Cut the points C of turntable platter with the pincers and pull it out from the shaft of spindle motor.
- 3) Remove the two screws D from the mechanical chassis.

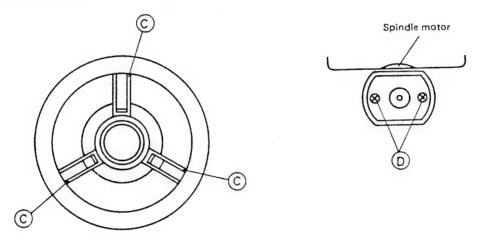

Press the center of turntable platter and insert the turntable platter in the shaft of spindle motor.




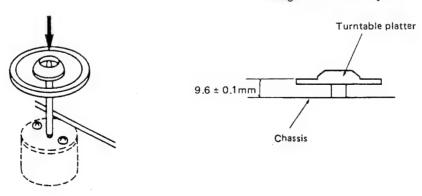

CIRCUIT DESCRIPTIONS

1. Focus Servo Circuit

The focus servo ensures that the laser beam emitted by the optical pickup is always focused on the reflective surface of the disc. It does this by moving the optical pickup's objective lens in response to oscillations in the disc surface

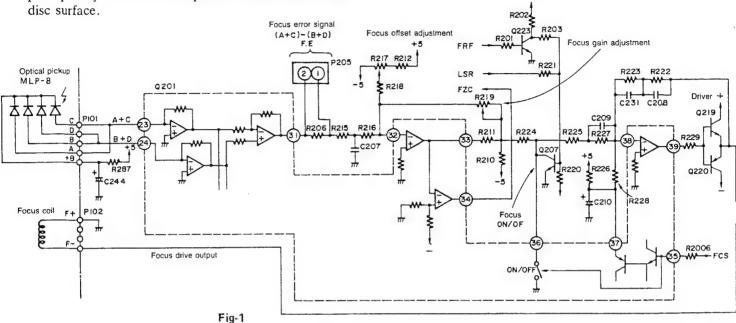

1-1. Focus Error Detector

The detector obtains the difference between the signals produced by the diagonal elements of a four-section photodiode housed in the pickup and utilizes an astigmatic method to detect focusing errors.

FE (focus error) = (A + C) - (B + D) (A + C) and (B + D) are input into pin 23 and pin 24 of Q201 respectively. The FE signal is calculated by the three opamps in Q201 and output via pin 31.

1-2. Phase Correctors - Drivers

The focus error signal is relayed from Q201 pin 31 to pins 32, 33, 38 and 39 in succession. Then, after passing through drivers Q219 and Q220, it is fed back to the focus coil of the pickup.


C207, C209 and C208 are phase correctors which enhance the servo's stability. Semi-fixed resistors R217 and R219 are used to regulate offset and gain in the servo circuitry. Q207 and the switch in pin 36 turn the servo loop on and off. Control is maintained by means of the following three signals: the FCS signal sent from Q202, the FRF signal which indicates that the servo is engaged and the LSR (laser) signal sent from microprocessor Q204.

1-3. FZC (Focus Zero Cross) and FCS (Focus Search) Circuits

The focusing servo's capture range is only approximately $10\mu m$, so, when the objective lens is being moved up or down, the above-mentioned servo on/off


switch must be controlled to close the loop when the point of focus of the laser beam is positioned precisely. When a focus search command is received from the microprocessor, the LSR signal switches to LOW and a laser beam is emitted (see fig. 2). At the same time, the FCS signal switches to HIGH. C210 and R226 integrate the FCS signal creating a chopping wave, and raise the objective lens into position.

As the laser beam approaches the point of focus, the FRF signal (see fig. 2) changes to HIGH, and the FE signal builds up (+) electrical potential which falls when optimum focus is reached. This comparator's output FZC signal is output from pin 34 of Q201. According to this timing, FCS changes to LOW, and Q207 and the switch of pin 36 shut off, closing the servo loop. Fig. 2 illustrates the timing. The dotted lines show the waveforms produced by focus capture errors.

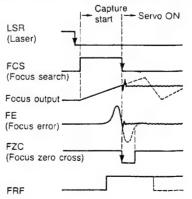

2. Tracking servo

This control circuit moves the objective lens radially to keep the laser beam precisely centered in the tracks on the disc surface (which are only $1.6\mu m$ wide).

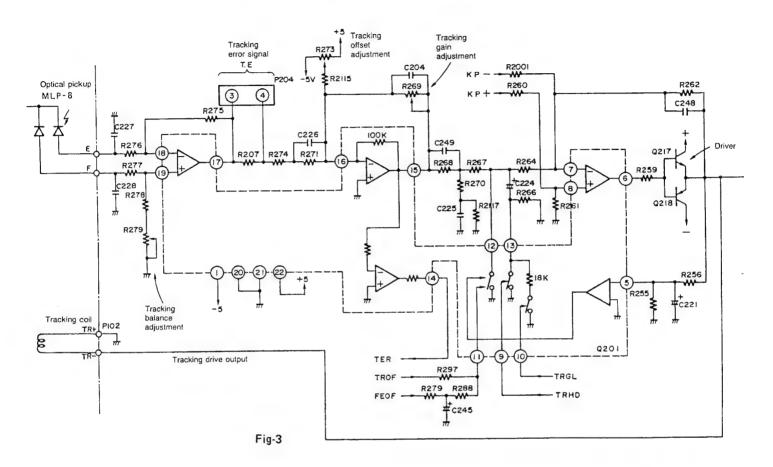

2-1. Tracking Error Sensor

This unit uses a three-beam laser pickup. The error signal is obtained from the difference between the E and F output from both sides of a four-section photodiode housed in the pickup.

T.E. (tracking error) = F - E

The E and F signals are input into pins 18 and 19 of Q201, the difference is obtained by an internal opamp, and the T.E. signal is output from pin 17.

2-2. Phase Correctors - Drivers

The tracking error signal is relayed from Q201 pin 17 to pins 16, 15, 7 and 6 in succession. After passing through drivers Q217 and Q218 it drives the tracking coil of the pickup. C226, C249, C225 and C224 are capacitors which perform phase corrections. Balance, offset and gain are regulated by semi-fixed resistors R279, R273 and R269 respectively.

The switches incorporated in pins 12 and 13 of Q201 turn the servo on and off and switch the high frequency range loop gain on and off, thereby helping to stabilize transient operation during access times. The timing of

these switches is determined by the input into pins 9 – 11 of Q201. The commands are as follows:

TROF (tracking OFF) FEOF (feed OFF)
TRGL (tracking gain low) TRHD (tracking

TRGL (tracking gain low) TRHD (tracking high down)

Signals are output from Q202 in response to commands from microprocessor Q204.

2-3. TER circuit

The TER signal is one of the sensors that determines the switch timing mentioned above. It is produced by running the tracking error signal output from pin 15 through a comparator at the ground level and then output through pin 14.

2-4. Track Kick Circuit


This circuit is used to move the laser beam to a target pit over relatively short distances (approximately 1 – 100 tracks) during such operations as disc access and cue review. In conjunction with the on/off switching discussed above, it sends positive and negative "kick pulses" (KP+ and KP-) to pins 7 and 8, thereby shifting the tracking coil by the desired amount.


The timing is determined by signals such as the TER signal and the HFD signal (see below). Fig. 4 illustrates the timing during a typical "kick" operation (forward).

3. HF (RF) Amp

The HF (RF) amplifier block amplifies the HF (RF) data encoded on the disc (in other words the entire output from the four-section photodiode) and sends it to the processing circuit block. In addition, it constantly checks the status of the servo and detects the signals which determine timing.

H.F.
$$(R.F.) = A + B + C + D \leftarrow Eye-Pattern$$

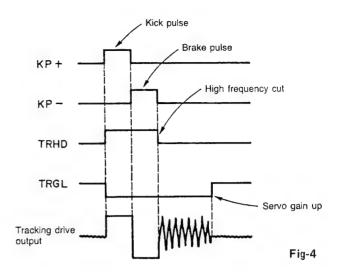

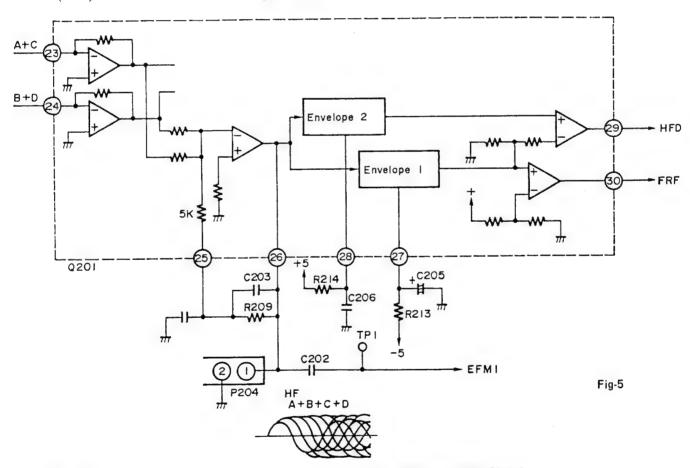


3-1. HF Amp

The A + C and B + D signals are input from pins 23 and 24 of Q201. They are added together by an opamp and the resulting signal (the HF signal) appears at pin 26. The HF signal is then passed through C202 and sent to the EFMI terminal of Q202 for signal processing.

3-2. HFD and FRF Signals

The HF signal is input into C205 and C206, two envelope detection circuits with different time constants. The output is put through a comparator at a certain level and the HFD and FRF signals are then output via pins 29 and 30. The FRF signal indicates that focus in on; it is HIGH when focus is on. The HFD (HF detector) detects such things as the flat sections between pits and scratches on the disc surface. Together with the TER signal, it determines switching timing during disc access, etc.

4. Slide Motor (Feed Motor) Circuit

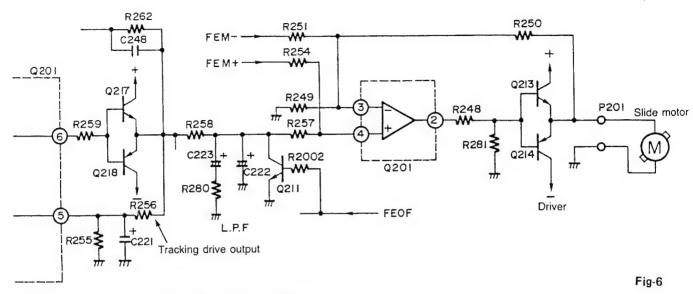

This servo circuit moves the entire pickup assembly from the disc's hub to its outer edge, ensuring that the objective lens stays close to the optical axis.

C222, C223, etc. remove low-frequency elements from the tracking drive's output. It then passes successively through pins 4 and 2 of Q201 and then drives the motor via drivers Q213 and Q214.

Q211 is the transistor that turns the slide servo on and off. It is controlled by the FEOF (feed off) signal sent from Q202.

Motor fast forward and reverse are initiated by FEM— (feed motor –) and FEM+ (feed motor +) signals input into pins 3 and 4 of Q201 for smooth disc access.

5. Spindle Motor Servo

This servo consists of a PLL circuit which extracts the clock signal from the HF signal the pickup reads from the disc and a circuit which controls the spindle motor based on this clock signal.

5-1. PLL Circuit


The PLL circuit consists of VCO, LPF and a phase comparator in Q202 as shown in fig. 7.

The 8.64MHz VCO oscillator output is divided in half inside Q202. The phase of the HF signal and the waveformshaped EFM signal edge are compared and the result output through pin 4.

When PLL is locked, LPF output from pin 7 of Q210 is approximately 2.5V and the SYEQ (sync equal) terminal (Q202, pin 10) changes to HIGH.

5-2. Spindle Motor Circuit

The spindle motor is controlled by DM+ (disc motor +) and DM- (disc motor -) commands output from pins 11 and 12 of Q202. Two opamps perform phase correction and amplify the signals which are then sent to the spindle motor via drivers Q215 and Q216.

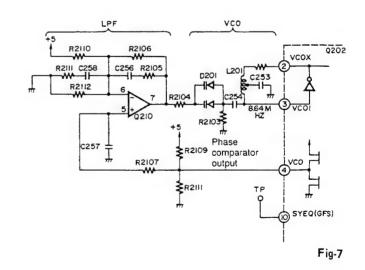

-17-

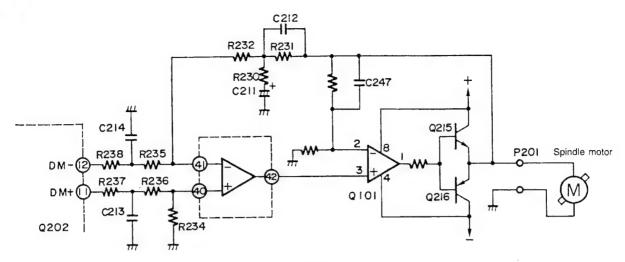


Fig. 8

6. HF Signal Waveform-shaping Circuit

This circuit shapes the HF signal and converts it into a binary value. However, since asymmetry (i.e. lack of symmetry between the top and bottom of the HF signal which can adversely affect the DC balance) caused by dispersion during disc manufacture cannot be eliminated by AC linking alone, DC components from the EFM (eight to fourteen modulation) signal are fed back after shaping for slice level processing. The slice level output from Q210 pin 1 is approximately 2.5V during normal operation.

7. APC Circuit

The laser diode is extremely temperature sensitive. For this reason, the APC (auto power control) circuit, which continuously monitors the laser output and feeds it back, is essential.

Negative feedback control is performed on the output signal from the monitor diode inside the laser pickup by Q101. Q103 switches the laser on and off in response to the LSR (laser) command from the microprocesor.

8. Microprocessor (Q204) Peripheral Circuit

8-1. Display Controller (Q204)

The dynamic scan technique used by the display controller is driven directly by 8-digit output from pins 5-12 of Q204 and 8-segment data output from pins 17-20 and 22-25. The duration of each digit is approximately 1ms with cycles of $1\times8=8$ ms (125Hz).

8-2. Key Input Processor (Q204)

The processor uses the display digits as is without alteration. Q204 uses a 4×3 matrix configuration and accepts key input through pins 26-29 (regular logic). This matrix also controls three remit switches (open/close, pickup reset) as well as timer switches, etc.

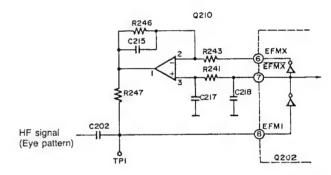


Fig. 9

8-3. Remote Control Signal Processing (Q402, Q204)

Output from infrared sensor U401 is sent to pin 15 of Q402 where noise from sources such as fluorescent lights is removed. Then it is output from pin 14 and sent to Q203 pin 37. Fig. 10 shows a typical remote control waveform.



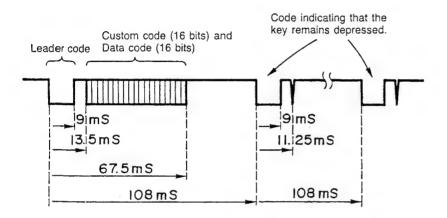


Fig. 10


TROUBLE SHOOTING GUIDE

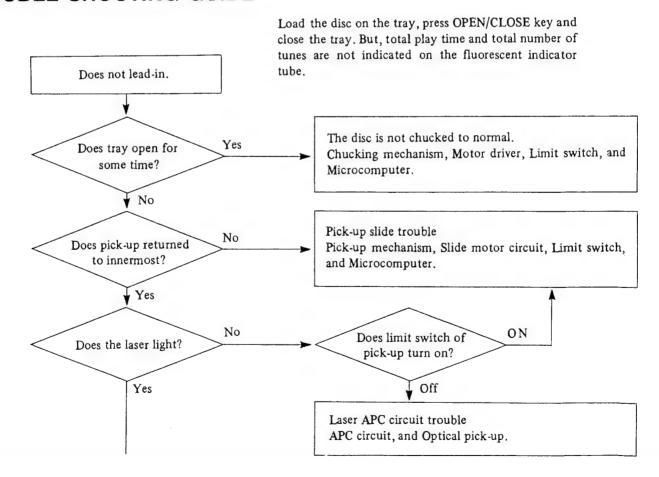

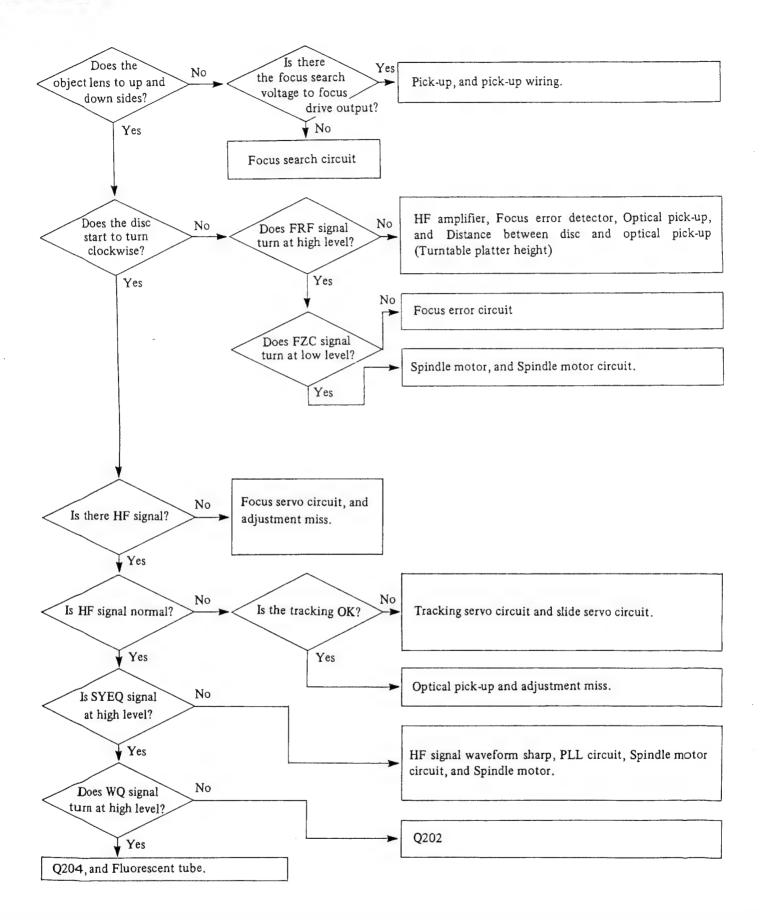

IC DESCRIPTIONS


XB087A0(Servo Linear Circuit)

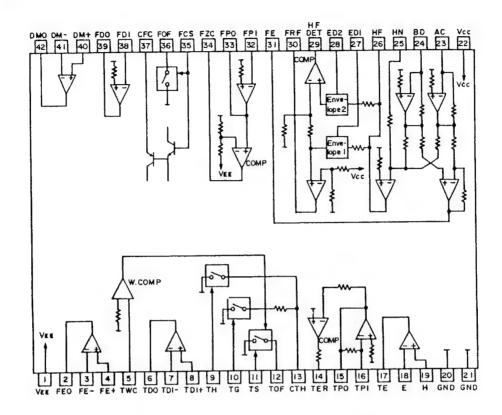


Pin No.	Designation	Function		
2~4	FEO, FE-, FE+	Feed drive amplifier dvives the feed power amplifier and is rotated the feed motor.		
5	TWC	Terminal of tracking drive limiter to tracking coil. The reference voltage of this circuit is about ±0.67V.		
6~19		Tracking servo system terminals.		
6~8	TDo, TDi-, TDi+	Tracking drive amplifier drives the tracking power amplifier and actuates the tracking actuator.		
9~11	TH, TG, TS	Tracking jump control switches. TH: Tracking hold switch TG: Gain control switch TS: Tracking offset switch		
12~13	TOF, CTH	These terminals are controlled the tracking loop by TH,TG and TS (pins 9,10,and 11).		
14	TER	The output terminal of comparator of tracking zero cross.		
15~16	TPo, TPi	Input/Output terminals of tracking preamplifier.		
17~19	TE, E, F	This circuit is constituted by I-V conversion and differential amplifier. The reflected sub beams are converted into electric signals by the E and F, and the mutual differences are obtained as a tracking error signal.		
23~39		Focus servo system terminals.		
23~24	AC, BD	Input terminals from main spot of photo diode.		
25~26	HN, HF	Feedback terminal and output terminal of HF (RF) signal.		
27~28	ED1, ED2	Terminals for peak hold (pin 27) and bottom hold (pin 28) of HF (RF) signal.		
29, 30, 34		Output terminals of servo IC to control the focus tracking.		
29	HF	HF output is L level on the track of disc and H level on mirror section.		
30	FRF	This circuit is the focus servo to on when comes the focus point from focus search condition.		

Pin No.	Designation	Function		
34	FZC	Use when the focus search. Same as FRF	Use when the focus search. Same as FRF	
35	FCS	Signal input terminal to pull the focus.		
36	FOF	Attenuator terminal.		
37	CFC	Terminal to make the ramp waveform of focus search ramp circuit.		
38~39	FDi, FDo	Input/output terminals of focus drive amplifier.		
40~42	DM+, DM-, DMo	Input/output terminals of disc drive amplifier.		


YM3805 (Signal Processor & Controller)

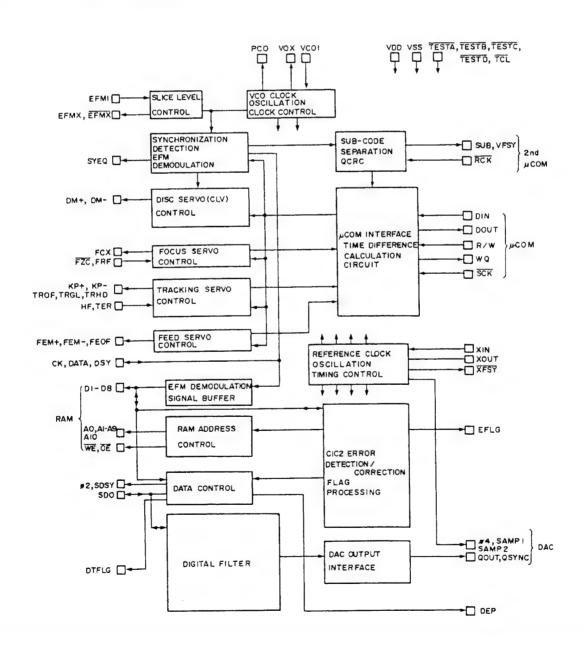

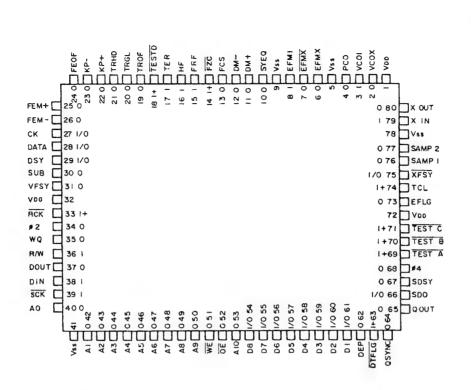


Pin No.	Designation	Function
79,80	79 × IN and 80 × OUT	Clock Oscillator (8.6436MHz)
6~8	8 EFMI, 7 EFMX, and 6 EFMX	EFM External Circuit
2~4	4 PCO, 3 VCO1, 2 VCOX	Clock Regeneration Circuit
10	SYEQ	WYNC Match Signal
27~29	27 CK, 28 DATA, and 29 DSY	FM Demondulation Signal Check Output
30, 31, 33	30 SUB, 31 VFSY, and 33 RCK	Sub-code Output
35~37,39	35 WQ, 36 R/W, 37 DOUT, and 39 SCK	Q-code Output related Pins
36, 38, 39	36 R/W, 38 DIN, and 39 SCK	μ COM Command related Pins
13~15	Input 14 FZC - 15 FRF, and Output 13 FCS	Focus Servo-mechanism related Pins
11,12	11 DM+, and 12 DM-	Disc Servo-mechanism Pins
16,17 19~23	Input 16 HF, and 17 TER Output 19 TROF, 20 TRGL, 21 TRHD, 22 KP+, and 23 KP-	Tracking Servo-mechanism related Pins
24~26	24 FEOF, 25 FEM+, and 26 FEM-	Feed Servo-mechanism related Pins
40,42~61	40A0-53A10, 51 WE, 52 OE, and 54D8-61D1	RAM Connection
75	75 XFSY	Crystal Clock SYNC Signal
73	73 EFLG	C1 and C2 Error Correction Check Signal
34, 66, 67 69, 71, 63	34 φ2,66 SDO, SDSY,63 DTFLG 69 TEST A, and 71 TESTC	DATA Control Circuit-Serial Signal Output
64,65 68,76,77	65 Q OUT, 64 Q SYNC, 76 SAMP1, 77 SAMP, 2 and 68 φ4	DAC Interface
62	62 DEP	De-emphasis Signal
8, 18 69~71	69 TEST A, 70 TEST B, 71 TEST C, 18 TEST D, and 8 TCL	Test Pins


CXK5816M-15/HM6116F-P4(16bit RAM)

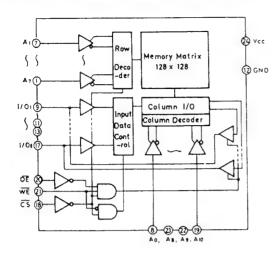

TA7354P (Motor Driver)

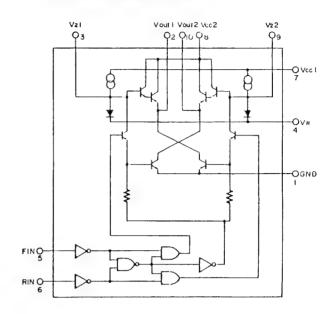


Connection of Micro Computer

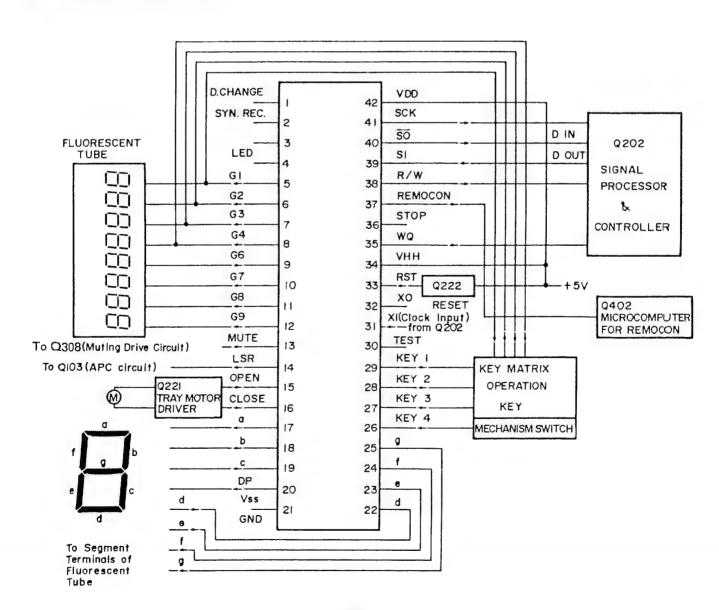

Pin NO.	Terminal	Description		
5~8 9~12 17~19 20 22~25	G1-G4 G6-G9 a-c DP d-g	Control of fluorescent display tube is used the dynamic driver method. The digit datas of eight figures and eight segment datas are output from microcomputer.		
13	MUTE	Audio muting control output for audio muting when the disc is stopped, and during accessing operations and pause mode. Muting is applied when the output is at high level.		
14	LSR	Optical pick-up laser on/off control output. Laser is on when the output is at low level.		
15 16	OPEN CLOSE	These signals used to control disc tray openning and closing operations. Control signals are passed direct from the microcomuter to pins 5 and 6 of the Q221 tray motor driver.		
26	KEY 4	The condition of mechanical switches (open, close, and start) is processed, and data of switches is read by KEY 4 input port.		
27~29	KEY 3-KEY 1	A 12(4x3) matrix is formed by using the digit datas. (Positive logic)		
31	X1	Clock input from Q202.		
33	RST	Using an IC designed specifically for microcomputer resetting, a reset output (low level) is applied to the microcomputer RST terminal when +5V line voltage drops below 4V reference voltage. This pin is normally switched on, and subsequently kept at high level.		
37	REMOCON	Remote control input terminal. Leader Custom & Code indicating that the key remains depressed. 9ms 13.5ms 67.5ms 108ms 108ms		
35	WQ	Write request: High level when transmit the information to micro computer.		
38	R/W	Read/Write: High level when transmit the command from micro computer.		
39	SI	Serial input: Transmit the servo system condition and sub-code data to micro computer.		
40	SO	Serial output: Transmit the command data from micro computer to servo system.		
41	SCK	Serial clock: Clock of serial data. Data is shifted at trailing edge.		

YM3020 (D/A CONVERTER)

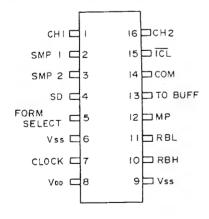

Pin No.	Designation	Function (Assignment)
1.	V OUT CHI	Sample-hold analog switch output for Channel 1.
2.	SMP 1	Interval of signal at state "1" will be the sampling time of CH1.
3.	SMP 2	Interval of signal at state "1" will be the sampling time of CH2. The rising edge of SMP 1 and SMP 2 is used to generate the internal signal to latch the serial data. The level frequency characteristics will be improved as the signal time of SMP 1 and SMP 2 becomes longer.
4.	SD	Serial input of converted digital signal.
5.	FORM SELECT	Corresponds to binary input at state "1", and corresponds to 2's complement input at state "0".
6.	V _{SS}	Low-potential side power (GND).
7.	CLOCK	Clock to drive shift-resistor and time-generator (ϕ 4).

Pin No.	Designation Function (Assignment)			
8.	V _{DD}	High-potential side reference power.		
9.	V _{SS}	Low-potential side reference power (GND).		
10.	RBH	Since the same resistance is inserted between the RBH pin and the internal V_{DD} power supply and between the RBL pin and the internal V_{SS} (GND) power supply, a high precision voltage of $1/2 \ V_{DD}$ can be obtained when both pins are connected. This voltage is applied on the MP pin through the buffer operational amplifier.		
11.	RBL	As in the case of the basic circuit, the drift from 1/2 V _{DD} can be corrected by providing an appropriate external resistance on either one of the two pins.		
12.	MP	An exponential analog shift is executed with the potential applied on MP as the reference. Normally, bias is appoied for 1/2 VDD.		
13.	TO BUFF	Analog output of DAC is input to buffer operational amplifier.		
14.	сом	Common input of analog switch for CH1 and CH2.		
15.	ICL	"1": Normal operation. "0": Will become no-signal output regardless of D signal.		
16.	V _{OUT} CH2	Sample-hold analog switch output for CH2.		

ADJUSTMENT PROCEDURES

Instruments required

Dual trace oscilloscope, Frequency counter, CR oscillator, Test disc (SONY YEDS-18 TYPE4), Short clip, Resistor. 1kohm

1. VCO frequency adjustment

Turn the power switch to ON.

Connect the frequency counter to the pin 2 (CK) of P203. Connect the pins 1 (HF) and 2 (GND) with the short clip. Adjust L201 until the frequency counter reading 4.35MHz. After adjustment, remove the frequency counter and short clip.


2. Focus offset adjustment


Load the test disc YEDS-18 and play back the track 2. Connect the oscilloscope to pin 1 of P204.


Set R217 to mechanical center.

Adjust R217 until a clear trace of waveform pattern as shown photo 1 appear on the oscilloscope.

After adjustment, remove the oscilloscope.

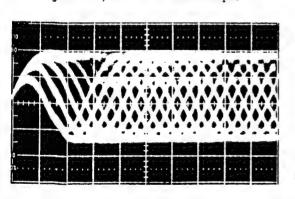

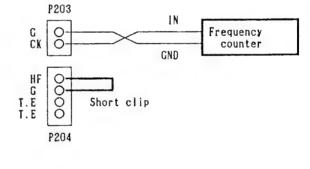



0.5V/div. 0.5µs/div.

Photo 1


3. Focus gain adjustment


Connect the dual trace oscilloscope to pins 1 (CH1) and 2 (CH2) of P205 at play condition.

Apply a sine wave 500mVp-p at 1kHz via resistor 1kohm from CR oscillator to pin 1 of P205.

Adjust R219 so that the waveforms of channel 1 and channel 2 become same level. (Refer photo 2).

After adjustment, remove the CR oscillator and oscilloscope.

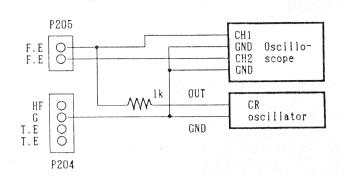

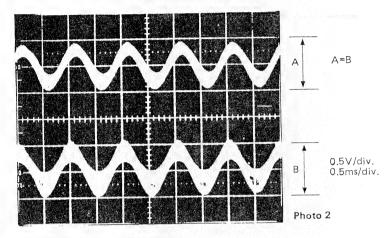



4. Tracking balance adjustment

Turn R269 to minimum position (counter-clockwise) at play condition.

Connect the oscilloscope to pin 3 (TE) of P204.

Adjust R279 until both positive and negative peaks of the waveform becomes equal at 0V level. (Refer photo 3)
After adjustment, set R269 to mechanical center and remove the oscilloscope.



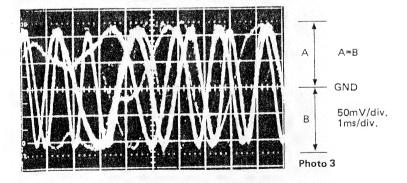


5. Tracking offset adjustment

Connect the oscilloscope to the emitter of Q214 (Output of slide motor) at play condition.

Connect the pins 4 (T.E) and 2 (GND) of P204 with the short clip.

Adjust R273 until both positive and negative peaks of the waveform becomes equal at 0V level.

After adjustment, remove the oscilloscope and short clip.

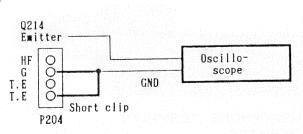


6. Tracking gain adjustment


Connect the dual trace oscilloscope to pins 3 (CH1) and 4 (CH2) of P204 at play condition.


Apply a sine wave 1 Vp-p at 1.2kHz via resistor 1kohm from CR oscillator to pin 4 of P204.

Adjust R269 so that the waveforms of channel 1 and channel 2 become same level. (Refer photo 4).

After adjustment, remove the CR oscillator and oscillo-scope.

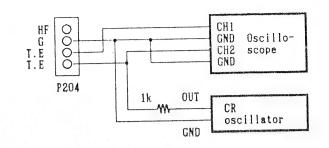


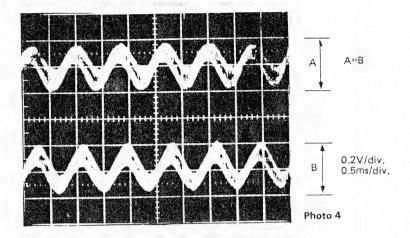

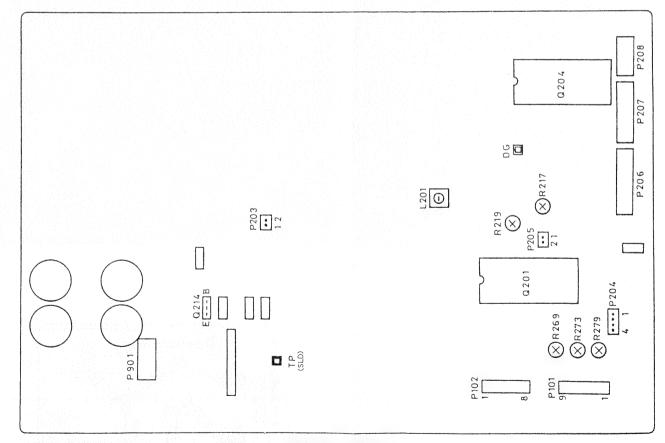


Adjustment Point


PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

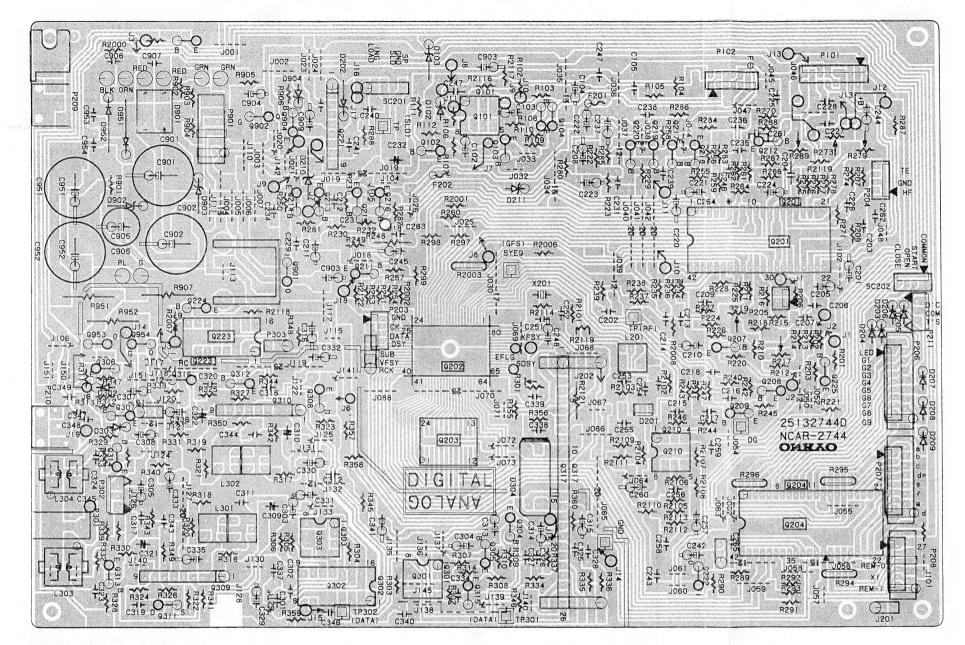


MAIN CIRCUIT PC BOARD

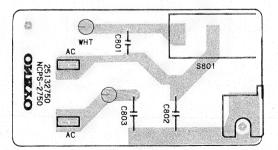


POWER SWITCH PC BOARD



HEADPHONE TERMINAL PC BOARD

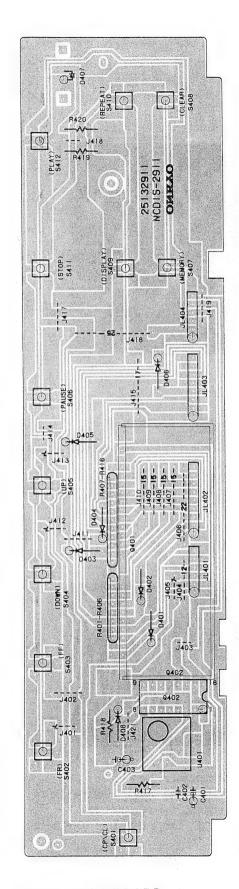

DISPLAY PC BOARD

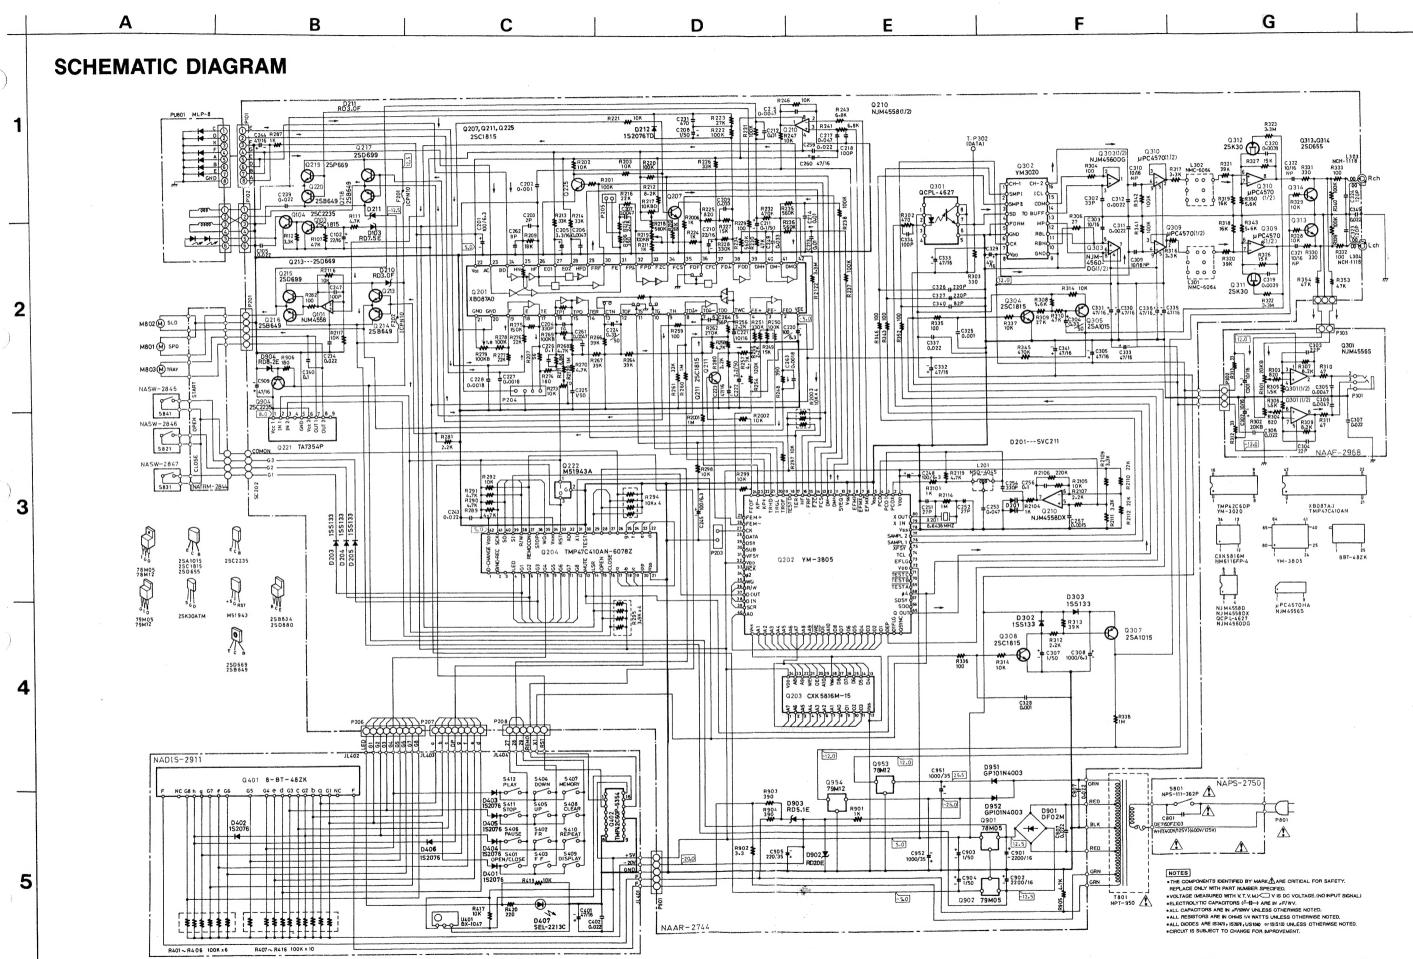

ONKYO CORPORATION

PRINTED CIRCUIT BOARD-PARTS LIST

MAIN CIRCUIT PC BOARD(NAAR-2744-5A)

CIRCUIT NO.	. PART NO.	DESCRIPTION	CIRCUIT NO	D. PART NO.	DESCRIPTION
	ICs			Coils	
Q101	222465	NJM-4558D	L201	232129	NSO-4045
Q201	222984	XB087A0	L301, L302	232127	NMC-6064
Q202	222975	YM3805	L303, L304	231066	NCH-1118
Q203	222990 or	CXK5816M-15 or	2000, 200.		1101-1116
	222882	HM6116F-P4		Fuses	
Q204	222986	TMP47C410AN-6078Z	F201, F202	252111	ICPN10, IC protector
2210	222502	NJM-4558DX			and the protection
2221	222826	TA7354P		Capacitors	
2222	22240018	M51943A	2.22		
2301	226028	QPCL-4627	C102	354742209	22μ F, 16V, Elect.
2302	222969	YM-3020	C201	354721019	$100\mu\text{F}$, 6.3V, Elect.
2303	22240002	NJM4560DG	C205	354780339	3.3μ F, 50V, Elect.
309, Q310	22240014	μPC4570HA	C208	354780109	1μ F, 50V, Elect.
901	222780052	78M05	C210	354742209	$22\mu\text{F}$, 16V, Elect.
2902	222790052	79M05	C211	354781099	0.1μ F, 50V, Elect.
953	222780122	78M12	C220	354721019	$100\mu F, 6.3V, Elect.$
954	222790122	79M12	C221	354741009	$10\mu F$, 16V, Elect.
			C222	354780229	2.2µF, 50V, Elect.
	Transistors		C223	354744709	47μF, 16V, Elect.
103, Q207	2211255	2SC1815(GR)	C224	354783399	$0.33\mu\text{F}$, 50V, Elect.
211	2211255	2SC1815(GR)	C225	352980106	$1\mu F$, 50V, Non-polar elect.
104	2211654	2SC2235(Y)	C244	354744709	47μF, 16V, Elect.
213, Q215	2200784 or	2SD669(C) or	C245	354721019	100µF, 6.3V, Elect.
217, Q219	2200783	2SD669(D)	C248	354721019	$100\mu F, 6.3V, Elect.$
214, Q216	2200794 or	2SB649(C) or	C260	354744709	47μF, 16V, Elect.
218, Q220	2200793	2SB649(D)	C303	354741009	10μF, 16V, Elect.
AUTION:	Danlagement for to		C304	354783399	$0.33\mu\text{F}$, 50V , Elect.
AUTION.	Replacement for the	ansistors from Q213 to Q218, if	C305	354744709	$47\mu\text{F}$, 16V, Elect.
	(HFE) as the origin	made from the same beta group	C307	354780109	$1\mu\text{F}$, 50V, Elect.
	(nre) as the origin	ai type.	C308	354721029	1000μF, 6.3V, Elect.
	E 20D((0)(0)	20764040	C309, C310	352941006	10μF, 16V, Non-polar elect.
	Ex. 2SD669(C)	2SB649 <u>(C)</u>	C311, C312	372522224	2200pF±5%, 50V, Styrole
	Same beta	a group—	C319, C320	372523924	3900pF±5%, 50V, Styrole
225	2211255	2SC1815(GR)	C321, C322	352941006	10μF, 16V, Non-polar elect.
304, Q308	2211255	2SC1815(GR)	C323, C324	372521214	120pF±5%, 50V, Styrole
305, Q307	2211255 2211454 or	2SA1015(Y) or	C329-C333	354744709	47μF, 16V, Elect.
703, Q307	2211455		C335, C336	354744709	$47\mu\text{F}$, 16V, Elect.
311, Q312	2212375	2SA1015(GR)	C341	354721019	100μF, 6.3V, Elect.
313, Q314	2212373 2211704 or	2SK30ATM(GR)	C901, C902	354742229	2200 µF, 16V, Elect.
715, Q514	2211705	2SD655(E) or 2SD655(F)	C903, C904	354780109	1μF, 50V, Elect.
904	2211654		C905	354762219	220μF, 35V, Elect.
704		2SC2235(Y)	C909	354744709	$47\mu\text{F}$, 16V , Elect.
	Diodes		C951, C952	354761029	1000µF, 35V, Elect.
103	2243183 or	MTZ7.5C or	,		1000µ1, 35 v, Dicci.
	2239533	RD7.5EB3		Resistors	
201	225181	SVC211	R217, R273	5210064	N06HR10KBD, Semi-fixed
203-D205	223163	1SS133	R219, R269	5210070	N06HR100KBD, Semi-fixed
207	223163	1SS133	R279	5210070	N06HR100KBD, Semi-fixed
210, D211	2243431 or	RD3.0FB1 or	R294, R2003	49163103404	10kohmX4, 1/10W, Network
,	2243432	RD3.0FB2	R295	49163392404	3.9kohmX4, 1/10W, Network
212	223145 or	1S2076TD or		Plugs	
	223150	US1040			
302, D303	223163	1SS133	P101	25055152	NPLG-8P136
	223892	DF02M	P102	25055150	NPLG-6P134
	2243282 or	MTZ20B or	P203, P205	25055146	NPLG-2P130
	2239732	RD20EB2	P204	25055148	NPLG-4P132
	2243141 or	MTZ5.1A or		Sockets	
	2239451	RD5.1EB1	00004		
003			SC201	2000444	NSAS-5P403
03		MITZX ZA OT	V(1707	2000653	NICAG ADCOO
903	2243191 or	MTZ8.2A or	SC202		NSAS-4P609
903	2243191 or 2239551	RD8.2EB1	P206	25050273	NSCT-9P101
903 904	2243191 or		P206 P207	25050273 25050272	l l
903 904 951, D952	2243191 or 2239551	RD8.2EB1	P206 P207 P208, P901	25050273 25050272 25050270	NSCT-9P101
903 904 951, D952	2243191 or 2239551 223880	RD8.2EB1	P206 P207	25050273 25050272	NSCT-9P101 NSCT-8P100

CIRCUIT NO. PART NO.		DESCRIPTION
	Terminal	
P301	25045180	NPJ-2PDBL70

POWER SUPPLY CIRCUIT PC BOARD (NAPS-2750-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
C801	3500065A	$0.01\mu F$, AC400V/125V, Capacitor IS
S801	25035398 27300601	NPS-111-562P Power switch Cover, capacitor

HEADPHONE TERMINAL PC BOARD (NAAF-2968-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q301	222887	NJM4556S, IC
C301, C302	354741009	10μF, 16V, Elect. capacitors
R301, R302	5104172-1	N09RGL20KB15, Variable
		resistor
P301	25405139	HLJ054-01-010, Stero head-
		phone terminal
P302	25055234	NPLG-3P218, Plug
P303	25055132	NPLG-2P-116, Plug

DISPLAY CIRCUIT PC BOARD (NADIS-2911-2)

CIRCUIT NO	D. PART NO.	DESCRIPTION
U401	241068	BX-1407, Opto. module
Q401	212035	8-BT-48ZK, Fluorescent indi- cator tube
Q402	222989	TMP42C60P5534, IC
D401-D406	223145 or	1S2076TD or
	223150	US1040, Diodes
D407	225141	SEL2213C LED
C401	355744709	47μF, 16V, Elect. capacitor
R401-R406	49421104406	100kohmX6, 1/8W, Network resistor
R407-R416	49121104410	100kohmX10, 1/10W, Network resistor
S401-S412	25035548	NPS-111-S510, Push switches
	28140694	4.5X7.5X25, Cushion
	27190527	Holder

NOTE: THE COMPONENTS IDENTIFIED BY MARK A ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

WAVEFORM OF EACH SECTION

(when play back the track 2 of test disc YEDS-18)

